



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
-------	--------	--	---

## CANON

CANON	<b>NB-2L</b>	PC1018, PowerShot S30, PowerShot S40,PowerShot S50, PowerShot S45, PowerShot S60, PowerShot S70, Canon EOS 350D, Digital Rebel XT, EOS Kiss Digital N, POWER SHOT G9	
CANON	<b>NB-2L12</b>	DV-FV M100, ELURA 40 MC / 50 / 60, ELURA 65 / 70 / 80 / 85, ELURA 90, FV 500 / FV M200, FV M30 / FVM20, IXY DV3 / DV5 / IXY DV5-BL, IXY DVM3, MV-X10I / MV5 / MV5I, MV5I MC / MV5IMC, MV6IMC / MV800 / MV830, MV830i / MV850i / MV850I, MV880X / MVX200 / MVX200I, MVX20i / MVX250I / MVX25i, MVX300 / MVX30I / MVX330I, MVX350I / MVX35I / MVX40, MVX45i, Optura 30 / 40 / 400, Optura 50 / 500 / 60, PC1018 / ZR100 / ZR200, ZR300 / ZR400 / ZR500, ZR600 / ZR700	
CANON	<b>NB-3L</b>	Canon IXUS II,IXY DIGITAL 30,PowerShot SD10,IXUS I,Digital IXUS 700,Digital IXUS i5, PowerShot SD110, PowerShot SD20,PowerShot SD500,IXY DIGITAL 600,PowerShot SD110 DIGITAL ELPH[A], DIGITAL IXUS II s[E], IXY D30a[J], IXY DIGITAL L2	
CANON	<b>NB-4L</b>	PowerShot SD200, PowerShot SD300, Digital 50/40, Digital IXUS 30,Digital IXUS 40,Canon PowerShot SD400,IXY DIGITAL 55,IXY DIGITAL 40,IXY DIGITAL 50,Digital IXUS 50, IXUS 80IS, IXUS 75IS, IXUS 70IS	
CANON	<b>NB-5L</b>	PowerShot SD700 IS, PowerShot SD700 IS Digital ELPH, PowerShot SD900, Ixus 800 IS, Ixus 850 IS, Ixus 900 Ti, IXY Digital 800 IS, IXY Digital 900 IS, IXY Digital 1000 IS, IXUS 970IS, IXUS 960IS, IXUS 950IS, IXUS 860IX, IXUS 90IS	
CANON	<b>BP-412</b>	MV-3, MV-3i, MV-3iMC, MV-3MC,IXY DV M2, optura300, MVX10i; IXY DV M2, IXY DV2 , IXY DV, IXY DVM2-V	Canon BP-406;Canon BP-407;Canon BP-412;Canon BP-422
CANON	<b>BP-511</b>	<b>EOS 40D, EOS 5D</b> ,EOS-D30,G-1,Powershot Pro 90 IS/G1, optura Pi/10/20/100MC/200MC(US),FV40 KIT,FV300 KIT,FV50 KIT,FV M1,FV M10,FV400,IXY DV M(JAN) PowerShot G5, PowerShot G6, EOS-20D, EOS 5D	Canon BP-508;Canon BP-511;Canon BP-511A;Canon BP-512;Canon BP-514;Canon BP-535
CANON	<b>BP-915/911</b>	DM-MV1/10,ES-300V/4000/4000/410V/50/5000/520A/6000/6500V/7000es/7000V/8000V/8100H18/8100V/8200V,G-1000/10Hi/1500,GL1,GL-1, MV1/10/100; GL2 [A], XM2 [E], XV2 [J], XM2, G30Hi	



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
CANON	<b>BP-945</b>	Canon:Pro Camcorder:XL H1,XL2,XL2 Body Kit,XL1,XL1S,XM2,XM1,XV2,XV1;Camcorder: C2,Elura,E1,E2,E30,ES-300V,ES-4000,ES-410V,ES-420V,ES-50,ES-5000,ES-520A,ES-55,ES-60,ES-6000,ES-65,ES-6500V,ES-7000es,ES-7000V,ES-75,ES-8000V,ES-8100H18,ES-8100V,ES-8200V,ES-8400V,ES-8600,FV1,GL1,G10,G-1000,G10Hi,G-1500,G15Hi,G20Hi,GL2,G2000,G30Hi,G35Hi,G45Hi,G35Hi,MV1,MV10,MV10i,MV200,MV200i,OPTURA,UC-V10,UC-V100,C-V10Hi,UC-V200,UC-V20Hi,UC-V20,UC-V300,UC-V30Hi,UC-X1Hi,UC-X2,UC-X2Hi,UC-X30Hi,UC-X40Hi,UC-X45Hi,UC-X50,UC-X50Hi,UC-X55Hi,Ultura,V40,V400,V40Hi,V420,V500,V520,V60Hi,V65Hi,V72,V75Hi, Vistura,V50Hi,ZR	Canon BP-911;Canon BP-914;Canon BP-915;Canon BP-924;Canon BP-927;Canon BP-930;Canon BP-941;Canon BP-945;Canon BP-950;Canon BP-950G;Canon BP-970;Canon BP-970G
CANON	<b>NB-2LH</b>	EOS 400D,EOS 350D, EOS 400D, EOS 5D, Powershot G7, Powershot S80	Canon NB-2L
CANON	<b>NB-6L</b>	Digital Ixus 85 IS, Digital Ixus 95 IS, Digital Ixus 25 IS	
CANON	<b>LP-E5</b>	EOS Kiss F, EOS 1000D, EOS Rebel XSi, EOS 450D, EOS Rebel XS, EOS Kiss X2, EOS 500D	
CANON	<b>NB-7L</b>	Powershot G10 IS, Powershot G10	
CANON	<b>LP-E6 c/ Cargador</b>	5D Mk II	



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
-------	--------	--	---

## CASIO

CASIO	<b>NP-40</b>	Casio Exilim Pro EX-P600, Exilim EX-Z30, Exilim EX-Z40, Exilim Pro EX-P505, Exilim Pro EX-P700; Casio Exilim Zoom EX-Z50, Casio Exilim Zoom EX-Z55, Exilim Zoom EX-Z57, Exilim Zoom EX-Z750 Casio Exilim EX-Z500 ; Casio Exilim EX-Z600; Casio Exilim EX-Z700; Casio Exilim EX-Z750; Casio Exilim EX-Z850; Casio Exilim EX-Z1000; Casio Exilim EX-Z1050Casio Exilim EX-P505; Casio Exilim EX-P600; Casio Exilim EX-P700; Casio Exilim EX-P750; Benq DC E520; Benq DC E520+; Starblitz DSV 595 ;	PAC-0040
CASIO	<b>NP-20</b>	Casio Exilim EX-M1; Casio Exilim EX-M2;Casio Exilim EX-M20;Casio Exilim EX-S1;Casio Exilim EX-S1PM;Casio Exilim EX-S2;Casio Exilim EX-S3;Casio Exilim EX-S20;Casio Exilim EX-S100;Casio Exilim EX-S500;Casio Exilim EX-S600;Casio Exilim EX-S770;Casio Exilim EX-S880;Casio Exilim EX-Z3;Casio Exilim EX-Z4;Casio Exilim EX-Z5;Casio Exilim EX-Z11;Casio Exilim EX-Z40;Casio Exilim EX-Z60;Casio Exilim EX-Z65;Casio Exilim EX-Z70;Casio Exilim EX-Z75;Casio Exilim EX-Z77;Benq DC T580;Benq DC T700;Benq DC T800;Benq DC X720;Benq DC X725;Starblitz PMS1;Werlisa Slim X10	
CASIO	<b>NP-60</b>	Casio Exilim EX-S10;Casio Exilim EX-Z19; Casio Exilim EX-Z20; Casio Exilim EX-Z80; Casio Exilim EX-Z85; Casio Exilim EX-Z9	FujiFilm NP-60;Pentax D-Li2;Casio NP-30;Ricoh DB-40;Samsung SLB-1037;Samsung SLB-1137;Kodak KLIC-5000;HP A1812A;HP L1812A;HP L1812B;HP R07;Olympus Li-20B;Panasonic CGA-S301;A-S302A;Panasonic VW-VBA10
CASIO	<b>NP-80</b>	Exilim EX-Z1;Exilim EX-Z19; Exilim EX-Z270; Exilim EX-S5	

## JVC

JVC	<b>BN-V416U</b>	VL100/105/107/108/109/200/205/300/305/307/308/309/357/500/507/800/805, GR-DVL805U/815U/820U/920U; GR-D50K/D70K/D90K/HD1, GR-DV2000/2000U/5000/500US/800US,GR-DVL310/310U/505U/510U/915U/120U/300U/320U/500U/520U/720U/725U; GR-HD1US, GR-D30US/D33US/D70US/D72US/D90US/D93US/D200US/D230/D230US/DZ7/X5EX/D231/D93/D7
JVC	<b>BN-VF707U</b>	JVC GR-D250,GR-D250U,GR-D250US,GR-D240,GR-D247,GR-D275US,GR-D271US,GR-D295US,GR-D270US,GR-D290US,GR-D290,GR-D270,GR-DF590,GR-DF420,GR-DF540,GR-DF565,GR-X5, GR-D series, GR-DF series, GR-X5 series, GR-D240EX, GR-D270EX, GR-D420EX, GR-X5EX, GZ-MG40AC
JVC	<b>BN-VF808</b>	JVC Everio GZ-HD7, Everio GZ-MG130, GZ-MG155



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
JVC	<b>BN-V114U</b>	GR-DVP3U/DVP7U/DVP9U/DX300US/DX75US/DX95US, GR-DVP9U, GR-DX77US/97US; GR-DX107/ DX37/ DX27, GR-DX25E	
JVC	<b>BN-VM200</b>	JVC GZ-MC100,GZ-MC100EK, GZ-MC100EX, GZ-MC100US, GZ-MC200E,GZ-MC200,GZ-MC200EX, GZ-MC200US, GZ-MC500, GZ-MC500EK, GZ-MC500EX	
JVC	<b>BN-VF714</b>	JVC GR-D250,GR-D250U,GR-D250US,GR-D240,GR-D247,GR-D275US,GR-D271US,GR-D295US,GR-D270US,GR-D290US,GR-D29,GR-D270,GR-DF590,GR-DF420,GR-DF540,GR-DF565,GR-X5, GR-D series, GR-DF series, GR-X5 series, GR-D240EX, GR-D270EX, GR-D420EX, GR-X5EX, GZ-MG40AC	
JVC	<b>BN-VF815</b>	JVC GR-D720;JVC GR-D720E;JVC GR-D720EX;JVC GR-D721;JVC GR-D721E;JVC GR-D721EX;JVC GR-D725;JVC GR-D725E;JVC GR-D725EX;JVC GR-D726;JVC GR-D726E;JVC GR-D726EX;JVC GR-D728;JVC GR-D728E;JVC GR-D728EX;JVC GR-D740;JVC GR-D740E;JVC GR-D740EX;JVC GR-D745;JVC GR-D745E;JVC GR-D745EX;JVC GR-D746;JVC GR-D746E;JVC GR-D746EX;JVC GR-D750;JVC GR-D750E;JVC GR-D750EX;JVC GR-D760;JVC GR-D760E;JVC GR-D760EX;JVC GR-D770;JVC GR-D770E;JVC GR-D770EX;JVC GR-D771;JVC GR-D771E;JVC GR-D771EX;JVC GR-D775;JVC GR-D775E;JVC GR-D775EX;JVC GR-D790;JVC GR-D790E;JVC GR-D790EX;JVC GR-D796;JVC GR-D796E;JVC GR-D796EX;JVC GR-D820;JVC GR-D820E;JVC GR-D820EX;JVC GR-D850;JVC GR-D850E;JVC GR-D850EX;JVC GR-D870;JVC GR-D870E;JVC GR-D870EX;JVC GR-D875;JVC GR-D875E;JVC GR-D875EX;JVC GR-DA30;JVC GR-DA30US;JVC GZ-HD3;JVC GZ-HD3EX;JVC GZ-HD5;JVC GZ-HD5EX;JVC GZ-HD6;JVC GZ-HD6EX;JVC GZ-HD7;JVC GZ-HD7EX;JVC GZ-HD10;JVC GZ-HD10EX;JVC GZ-HD30;JVC GZ-HD30EX;JVC GZ-HD40;JVC GZ-HD40EX;JVC GZ-MG130;JVC GZ-MG130E;JVC GZ-MG131;JVC GZ-MG131E;JVC GZ-MG132;JVC GZ-MG132E;JVC GZ-MG133;JVC GZ-MG133E;JVC GZ-MG134;JVC GZ-MG134E;JVC GZ-MG135;JVC GZ-MG135E;JVC GZ-MG148;JVC GZ-MG148E;JVC GZ-MG150;JVC GZ-MG150E	BN-VF808; BN-VF808E;BN-VF808U;BN-VF815;BN-VF815E;BN-VF815U;BN-VF823;BN-VF823E;BN-VF823U
JVC	<b>BN-VF823</b>	JVC Everio GZ-HD7, Everio GZ-MG130, GZ-MG157	BN-VF808; BN-VF808E;BN-VF808U;BN-VF815;BN-VF815E;BN-VF815U;BN-VF823;BN-VF823E;BN-VF823U

**KODAK**

<b>KODAK</b>	<b>KLIC-5001</b>	EasyShare DX6490, EasyShare DX7630, EasyShare DX7590,EasyShare DX7440,EasyShare Z730,EasyShare Z760, EasyShare Z7590
--------------	------------------	--



<b>MARCA</b>	<b>Modelo</b>	<b>COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...</b>	<b>COMPATIBILIDAD CON OTROS MODELOS LITIO...</b>
--------------	---------------	---	--

## TASCO

TASCO-MINOLTA	<b>HZ 730/NP-900</b>	TASCO HZ1040;TASCO HZ 840 TASCO HZ 730;TASCO LD 700; KONICA-MINOLTA E40; E50
TASCO	<b>HZ 1030</b>	TASCO HZ1030, Acer CR-8530, Airis Photo Star DC80, Airis Photo Star DC80B, Airis Photo Star N710, Minox DC-8111, Premier DS-8330, Rollei DP-8300, Revue DC-8000, Werlisa WD-8200 Starblitz SD740 Starblitz SD840 Starblitz SD1010 Werlisa WD 1060 Werlisa WD 8500

## NIKON

NIKON	<b>EN-EL3e</b>	D 200 D300/ D 70 s / D 50 / D 80	
NIKON	<b>EN-EL5</b>	Nikon Coolpix 3700;Nikon Coolpix 4200;Nikon Coolpix 5200;Nikon Coolpix 5900;Nikon Coolpix 7900;Nikon Coolpix P3;Nikon Coolpix P4;Nikon Coolpix P80	
NIKON	<b>EN-EL8</b>	Nikon Coolpix S1;Nikon Coolpix S2;Nikon Coolpix S3;Nikon Coolpix S5;Nikon Coolpix S6;Nikon Coolpix S7;Nikon Coolpix S7c;Nikon Coolpix S8;Nikon Coolpix S9;Nikon Coolpix S50;Nikon Coolpix S50C;Nikon Coolpix S51;Nikon Coolpix S51C;Nikon Coolpix S52;Nikon Coolpix S52C;Nikon Coolpix P1;Nikon Coolpix P2;Kodak EasyShare LS755	Kodak KLIC-7000
NIKON	<b>EN-EL10 / Olympus Li-40B</b>	Coolpix S510 Coolpix S200 Coolpix S700 Coolpix S500, Coolpix S550, Coolpix S560	Olympus Li-40B;Olympus Li-42B;Fuji NP-45;Kodak KLIC-7006;Nikon EN-EL10;Pentax D-Li63
NIKON	<b>EN-EL9</b>	Coolpix P1, Coolpix P2, Coolpix S1, Coolpix S2, Coolpix S3,Nikon D40, D40x, D60	
NIKON	<b>NIK EN-EL11 / PENTAX_D-Li78 Olympus Li-60B</b>	NNikon Coolpix S550;Nikon Coolpix S560;Olympus FE-370;Olympus FE-370B;Pentax Optio M50;Pentax Optio M60;Pentax Optio V20;Pentax Optio W60;Ricoh R50;Sanyo Xacti VPC-E10	Nikon EN-EL11;Olympus Li-60B;Pentax D-Li78;Ricoh DB-80;Sanyo DB-L70
NIKON	<b>EN-EL12</b>	Nikon Coolpix S610 , Nikon Coolpix S610C , Nikon Coolpix S710	



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
-------	--------	--	---

## OLYMPUS

OLYMPUS	<b>Li-10B / Li-12B</b>	Stylus 300 digital, Stylus 400 digital, Stylus C-50, Camedia X-1 / X-2 / X-3 / μ-15 / μ-20 / μ-25 digital, DSC-J1, DSC-M23, Camedia C-760, C-7000, C70 Zoom, C-770 Ultra Zoom, μ-30 Digital, Camedia C-5000 Zoom, Camedia C-765 Ultra Zoom, Stylus 410 Digital / μ-410 DIGITAL, C-60 ZOOM; D-590 Zoom (US), C-470 Zoom (Euro), Stylus 800, Mju 800, μ Digital 800 / 500, Stylus 500 Digital, Stylus 800 Digital	Olympus Li-10B; Olympus Li-12B; Sanyo DB-L10; Sanyo DB-L10A
OLYMPUS - PENTAX - NIKON	<b>Olympus Li-42B / PENTAX DLi63/ NIKON Li10</b>	D630, FE-150, FE-190, FE-230, FE-240, FE-250, FE-280, FE-300, FE-5500, IR-300, μ[mju:] 700, μ[mju:] 720, μ[mju:] 720 SW, μ[mju:] 725, μ[mju:] 730, μ[mju:] 740, μ[mju:] 750, μ[mju:] 760, μ[mju:] 760 SW, μ[mju:] 770SW, μ[mju:] 780, μ[mju:] 790SW, μ[mj	Olympus Li-42B/ PENTAX  DLi63/ NIKON Li10
OLYMPUS	<b>BLM1</b>	EVOLT E-510 C-5060 Wide Zoom EVOLT E-500 MD160 EVOLT E-330 C-7070 Wide Zoom C-8080 Wide Zoom EVOLT E-300 E-1	Olympus BLM1; Olympus BLM-1; Olympus PS-BLM1
OLYMPUS	<b>BLS1</b>	EVOLT E-410 E-400	Olympus BLS1; Olympus BLS-1; Olympus PS-BLS1
OLYMPUS	<b>Li-50B</b>	μ[mju:] 1010, 1020, 1030SW	



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
-------	--------	--	---

## PANASONIC

PANASONIC	<b>CGA-S005E</b>	Panasonic Lumix DMC-FX8,DMC-FX8BS,DMC-FX8EBB,DMC-FX8EG-S,DMC-FX8EG-K,DMC-FX8EG-A,DMC-FX8EG-P,DMC-FX8-S,DMC-FX8-K,DMC-FX8-A,DMC-FX8-P,DMC-LX1,DMCLX1BS,DMC-LX1-K,DMC-LX1-S,DMC-LX1EG-K,DMC-LX1EG-S,DMC-FX9,DMC-FX9-S,DMC-FX9-K,DMC-FX9-R,DMC-FX9-H,DMCFX9BB,DMCFX9BS,DMC-FX9EG,DMC-FX9EG-S,DMC-FX9EG-K,DMC-FX9EG-R; Fujifilm FinePix F20;Fujifilm FinePix F40 FD;Fujifilm Finepix F45 FD;Fujifilm Finepix F47 FD;Fujifilm Finepix F50 FD;Leica C-LUX 1;Leica D-LUX 2;Leica D-LUX 3;Ricoh Caplio R3;Ricoh Caplio R4;Ricoh Caplio R5;Ricoh Caplio R40	Baterías compatibles: Panasonic CGA-S005A; Panasonic CGA-S005E ; Panasonic CGA-K/101; Panasonic DMW-BCC12; Fuji NP-70; Ricoh DB-60; Leica BP-DC2; Leica BP-DC4
PANASONIC	<b>CGA-S006E</b>	Lumix DMC-FZ30, Lumix DMC-FZ30BB, Lumix DMC-FZ30EG, Lumix DMC-FZ30EG-K, Lumix DMC-FZ30EG-S, Lumix DMC-FZ30-K, Lumix DMC-FZ30-	CGA-S006; CGA-S006E; CGA-S006E-1B ; CGA-S006E-1HH; CGR-S006; CGR-S006E; DMW-BMA7; Leica BP-DC5
PANASONIC	<b>CGA-S007E</b>	Lumix DMC-TZ 1, Lumix DMC-TZ 1 A, Lumix DMC-TZ 1 BK, Lumix DMC-TZ 1 BS, Lumix DMC-TZ 1, Lumix DMC-TZ 1 EF-K, Lumix DMC-TZ 1 EF-S, Lumix DMC-TZ 1 EG-A, Lumix DMC-TZ 1 EG-K, Lumix DMC-TZ 1 EG-S, Lumix DMC-TZ 1 GK, Lumix DMC-TZ 1 K, Lumix DMC-TZ 1 S	CGA-S007;CGA-S007E;CGR-S007;BP-S007;DMW-BCD10
PANASONIC	<b>CGA-DU07</b>	Panasonic NV-GS10B,NV-GS30,NV-GS50V,NV-GS50AW,NV-GS50K,NV-GS70K,NV-GS120K,NV-GS200K,NV-GS55K ; VDR-M30,VDR-M50,VDR-M70,PV-GS200,PV-GS120,PV-GS55,PV-GS50,PV-GS50S,PV-GS70,PV-GS400,NV-GS400B,NV-GS400EG-S,NV-GS200B, NV-GS200EG-S,NV-GS120B,NV-GS120EG-S,NV-GS55B,NV-GS55EG-S,VDR-M70B,VDR-M70EG-S,VDR-M50B,VDR-M50EG-S,PV-GS33,NV-GS33EG-S,PV-GS150,NVGS150B,NV-GS150EG-S,PV-GS75,NV-GS75B,NV-GS75EG-S,PV-GS250,NV-GS250B,NV-GS250EG-S	



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
PANASONIC	<b>CGA-DU14</b>	Panasonic NV-GS10B,NV-GS30,NV-GS50V,NV-GS50AW,NV-GS50K,NV-GS70K,NV-GS120K,NV-GS200K,NV-GS55K, VDR-M30,VDR-M50,VDR-M70,PV-GS200,PV-GS120,PV-GS55,PV-GS50,PV-GS50S,PV-GS70,PV-GS400,NV-GS400B,NV-GS400EG-S,VDR-M30,VDR-M50,VDR-M70,PV-GS200,PV-GS120,PV-GS55,PV-GS50,PV-GS50S,PV-GS70,PV-GS400,NV-GS400B,NV-GS400EG-S,NV-GS200B, NV-GS200EG-S,NV-GS120B,NV-GS120EG-S,NV-GS55B,NV-GS55EG-S,VDR-M70B,VDR-M70EG-S,VDR-M50B,VDR-M50EG-S, PV-GS33,NV-GS33EG-S,PV-GS150,NVGS150B,NV-GS150EG-S,PV-GS75,NV-GS75B,NV-GS75EG-S,PV-GS250,NV-GS250B,NV-GS250EG-S	Panasonic CGA-DU06; Panasonic CGA-DU07; Panasonic CGA-DU12; Panasonic CGA-DU14; Panasonic CGA-DU21; Panasonic CGA-DU21A; Panasonic CGA-DU21B; Panasonic CGA-DU21A/1B; Panasonic CGR-DU21E/1B; Panasonic CGR-DU06; Panasonic CGR-DU07; Panasonic CGR-DU12; Panasonic CGR-DU14; Panasonic CGR-DU21; Panasonic CGR-DU21A; Panasonic CGR-DU21B; Panasonic CGR-DU21A/1B; Panasonic VW-VBD070; Panasonic VW-VBD140; Panasonic VW-VBD210; Hitachi DZ-BP07P;Hitachi DZ-BP07PW; Hitachi DZ-BP07S; Hitachi DZ-BP07SJ; Hitachi DZ-BP07SW; Hitachi DZ-BP14P; Hitachi DZ-BP14PW; Hitachi DZ-BP14S; Hitachi DZ-BP14SJ; Hitachi DZ-BP14SW; Hitachi DZ-BP21P; Hitachi DZ-BP21PW; Hitachi DZ-BP21S; Hitachi DZ-BP21SJ; Hitachi DZ-BP21SW
PANASONIC	<b>CGA-D54S</b>	AG-DVC30/60, AG-DVX100A, EX1/3, MX300, MX500, MX7/5/1, NV-DS11, NV-DS150, NV-DS25, NV-DS27, NV-DS28, NV-DS29, NV-DS30, NV-DS33, NV-DS37, NV-DS38, NV-DS55, NV-DS60, NV-DS77, NV-DS8, NV-DS99, GS1, GS11, GS15, GS3, GS4, GS5, GX, MX	



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
PANASONIC	<b>S-008E</b>	Panasonic Lumix DMC-FX20;Panasonic Lumix DMC-FX30;Panasonic Lumix DMC-FX33;Panasonic Lumix DMC-FX35;Panasonic Lumix DMC-FX36;Panasonic Lumix DMC-FX55;;Panasonic Lumix DMC-FX500;Panasonic Lumix DMC-FX520;Panasonic Lumix DMC-FS3;Panasonic Lumix DMC-FS5;Panasonic Lumix DMC-FS20;Panasonic SDR-S7;Panasonic SDR-S9;Panasonic SDR-S10;Panasonic SDR-SW20;Panasonic SDR-SW28;Ricoh Caplio R6;Ricoh Caplio R7;Ricoh Caplio R8;Leica C-LUX2;	Panasonic CGA-S008;Panasonic CGA-S008A;Panasonic CGA-S008A/1B;Panasonic CGA-S008E;Panasonic CGA-S008E/1B;Panasonic CGR-S008;Panasonic DMW-BCE10;Panasonic DMW-BCE10E;Panasonic VW-VBJ10;Ricoh DB-70;Leica BP-DC6
PANASONIC	<b>BCG10E</b>	PANASONIC Lumix DMC-TZ6, DMC-TZ65, DMC-TZ7, DMC-ZS1, DMC-ZS3	
PENTAX - FUJI	<b>D-Li8 / FUJI  NP 40</b>	FUJIFILM FINEPIX F 402, FUJIFILM FINEPIX F 455, FUJIFILM FINEPIX F 455 Zoom, FUJIFILM FINEPIX F 460, FUJIFILM FINEPIX F 460 Zoom, FUJIFILM FINEPIX F 470, FUJIFILM FINEPIX F 470 Zoom, FUJIFILM FINEPIX F 610, FUJIFILM FINEPIX F 610 Zoom, FUJIFILM FINEPIX F 650, FUJIFILM FINEPIX F 650 Zoom, FUJIFILM FINEPIX F 700, FUJIFILM FINEPIX F 700 Zoom, FUJIFILM FINEPIX F 710, FUJIFILM FINEPIX F 810, FUJIFILM FINEPIX F 810 Zoom, FUJIFILM FINEPIX F 811, FUJIFILM FINEPIX V 10, FUJIFILM FINEPIX V 10 Zoom, FUJIFILM FINEPIX Z 1, FUJIFILM FINEPIX Z 1 Zoom, PENTAX OPTIO A 10, PENTAX OPTIO A 20, PENTAX OPTIO A 30, PENTAX OPTIO L 20, PENTAX OPTIO S, PENTAX OPTIO S 4, PENTAX OPTIO S 4 i, PENTAX OPTIO S 5 i, PENTAX OPTIO S 5 n, PENTAX OPTIO S 5 z, PENTAX OPTIO S 6, PENTAX OPTIO S 7, PENTAX OPTIO SV, PENTAX OPTIO SVi, PENTAX OPTIO T 10, PENTAX OPTIO T 20, PENTAX OPTIO W 10, PENTAX OPTIO W 20, PENTAX OPTIO WP, PENTAX OPTIO WPi, PENTAX OPTIO	FujiFilm NP-40; FujiFilm NP-40N; Pentax D-Li8; Panasonic CGA-S004; Panasonic CGA-S004E; Panasonic CGR-S004; Panasonic DMW-BCB7;Benq DLI-102; Konica Minolta NP-1; Samsung SLB-0737; Samsung SLB-0837
PENTAX	<b>D-Li68</b>	FinePix F50 fd,PENTAX Optio S10	





MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
-------	--------	--	---

## SAMSUNG

SAMSUNG	<b>SB-L110</b>	SCD20,SCD21,SCD23,SCD24,SCD27,SCD31,SCD33,SCD34,SCD303,SCD6040,SCD6050; SCD305, SCD307, SCD323, SCD325, SCD327, SCD530, SCD590, SCD93, SCD99, VP-D20, VP-D21, VP-D23, VP-D24, VP-D26, VP-D30, VP-D31, VP-D33, VP-D34, VP-D39, VP-D55, VP-D65, VP-D7L, VP-D93, VP-D97, VP-D99, VP-D101, VP-D103, VP-D105, VP-D107, VP-D230, VP-D250, VP-D270, VP-D301, VP-D303, VP-D305, VP-D307, VP-D323, VP-D325, VP-D327, VP-D530, VP-D590	
SAMSUNG	<b>SB-L220</b>	SCD20,SCD21,SCD23,SCD24,SCD27,SCD31,SCD33,SCD34,SCD303,SCD6040,SCD6050 ; SCD305, SCD307, SCD323, SCD325, SCD327, SCD530, SCD590, SCD93, SCD99, VP-D20, VP-D21, VP-D23, VP-D24, VP-D26, VP-D30, VP-D31, VP-D33, VP-D34, VP-D39, VP-D55, VP-D65, VP-D7L, VP-D93, VP-D97, VP-D99, VP-D101, VP-D103, VP-D105, VP-D107, VP-D230, VP-D250, VP-D270, VP-D301, VP-D303, VP-D305, VP-D307, VP-D323, VP-D325, VP-D327, VP-D530, VP-D590	Samsung SB-L70; Samsung SB-L70A; Samsung SB-LS70; Samsung SB-L110; Samsung SB-LS110; Samsung SB-L220
SAMSUNG	<b>SLB-0837B</b>	Digimax L70; Digimax L70B; Samsung L83T; Samsung NV8; Samsung NV10; Samsung NV15; Samsung VLUU NV10	
SAMSUNG	<b>SB-LSM80</b>	SAMSUNG SC-D351,SC-D353,SC-D453; SC-D455,VP-D351,VP-D352,VP-D352I,VP-D353I,VP-D353, VP-D354,VP-D647,VP-D651,VP-D653,VP-DC161,VP-DC163	



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
-------	--------	--	---

## SONY

SONY	<b>NP-FT1</b>	DSC-T1, DSC-T11, DSC-L1, DSC-T33; DSC-L1/B, DSC-L1/LJ, DSC-L1/R, DSC-T33, DSC-T10, DSC-T3, DSC-T1	
SONY	<b>NP-FM50 / NP-QM51</b>	DSC-F707/F717/S30/S50/S75/S85,MVC-CD250/CD400,GV-D1000,DCR-PC9E, DCR-TRV30,DCR-TRV27; DCR-DVD100 ,DCR-DVD200,DCR-TRV350,CCD-TRV318,DCR-PC330,DCR-TRV950,DCR-TRV250,DCR-TRV80,DCR-TRV70; DCR-PC105 ,CCD-TRV118,DCR-TRV38,DCR-TRV33 ,DCR-TRV22,DCR-TRV19, CCD-TRV116, CCD-TRV126	Sony NP-FM30; Sony NP-FM50; Sony NP-FM70; Sony NP-FM90; Sony NP-QM71D; Sony NP-QM91D
SONY	<b>NP-FM70 / NP-QM71</b>	MVC-CD250/CD400,GV-D1000,DCR-PC9E, DCR-TRV30,DCR-TRV27,DCR-TRV328,DCR-TRV460,DCR-DVD100,DCR-DVD200,DCR-TRV350,CCD-TRV318,DCR-PC330,DCR-TRV950,DCR-TRV250,DCR-TRV80,DCR-TRV70,DCR-PC105,CCD-TRV118, DCR-TRV38,DCR-TRV33,DCR-TRV22,DCR-TRV19,CCD-TRV116,DCR-DVD101,DCR-DVD201,CCD-TRV108,CCD-TRV128,CCD-TRV138,CCD-TRV308,CCD-TRV328,CCD-TRV338,CCD-TRV608,DCR-DVD300,DCR-DVD301,DCR-PC100,DCR-PC101,DCR-PC105,DCR-PC110,DCR-PC115,DCR-PC120BT,DCR-PC330,DCR-PC9,DCR-TRV10,DCR-TRV11,DCR-TRV140,DCR-TRV17,DCR-TRV18,DCR-TRV20,DCR-TRV230,DCR-TRV240,DCR-TRV25,DCR-TRV260,DCR-TRV280,DCR-TRV330,DCR-TRV340,DCR-TRV360,DCR-TRV39,DCR-TRV480,DCR-TRV50,DCR-TRV530,DCR-TRV6,DCR-TRV730,DCR-TRV740,DCR-TRV8,DCR-TRV830,DCR-TRV840,DSR-PDX10,HVL,IRM	Sony NP-FM30; Sony NP-FM50; Sony NP-FM70; Sony NP-FM90; Sony NP-QM71D; Sony NP-QM91D
SONY	<b>NP-F750</b>	CCD-CR1, CCD-SC5, CCD-SC55, CCD-SC65, CCD-TR3, CCD-TR3000, CCD-TR3300, CCD-TR516, CCD-TR555, CCD-TR67, CCD-TR716, CCD-TR76, CCD-TR818, CCD-TR84, CCD-TR87, CCD-TR910, CCD-TR917, CCD-TR930, CCD-TR940, CCD-TRV101, CCD-TRV11, CCD-TRV15, CCD-TRV215, CCD-TRV25, CCD-TRV30, CCD-TRV36, CCD-TRV41, CCD-TRV43, CCD-TRV46, CCD-TRV51, CCD-TRV57, CCD-TRV58, CCD-TRV615, CCD-TRV62, CCD-TRV65, CCD-TRV66, CCD-TRV66E(JE), CCD-TRV67, CCD-TRV68, CCD-TRV715, CCD-TRV72, CCD-TRV75, CCD-TRV81, CCD-TRV815, CCD-TRV82, CCD-TRV85, CCD-TRV86PK, CCD-TRV87, CCD-TRV88, CCD-TRV90, CCD-TRV91, CCD-TRV92, CCD-TRV93, CCD-TRV95, CCD-TRV98, CCD-TRV99, DCR-PC10, DCR-PC7, DCR-SC100, DCR-TR7000, DCR-TRV110, DCR-TRV110K, DCR-TRV120, DCR-TRV130, DCR-TRV210, DCR-TRV220K, DCR-TRV310, DCR-TRV310K, DCR-TRV315, DCR-TRV320, DCR-TRV5, DCR-TRV510, DCR-TRV520, DCR-TRV525, DCR-TRV620K, DCR-TRV7, DCR-TRV720, DCR-TRV820, DCR-TRV820K, DCR-TRV9, DCR-TRV900E(JE), DCR-TRV9(JE), DCR-VX1000, DCR-VX1000E, DCR-VX2100, DCR-VX2100E, DCR-VX700, DSR-200, HDR-FX1, HVR-Z1U, Q002-HDR1	NP-F750;NP-F770; NP-F950; NP-F960; NP-F970
SONY	<b>NP-FP50</b>	Sony DCR-HC20, DCR-HC30, DCR-HC40, DCR-HC65, DCR-HC85, DCR-HC17; DCR-DVD92	



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
SONY	<b>NP-FP70</b>	Sony DCR-HC20, DCR-HC30, DCR-HC40, DCR-HC65, DCR-HC85, DCR-HC17; DCR-DVD92	Sony NP-FP30; Sony NP-FP50; Sony NP-FP60; Sony NP-FP70; Sony NP-FP71; Sony NP-FP90; Sony NP-FP91
SONY	<b>NP-FP90</b>	Sony DCR-HC20, DCR-HC30, DCR-HC40, DCR-HC65, DCR-HC85, DCR-HC17; DCR-DVD92	Sony NP-FP30; Sony NP-FP50; Sony NP-FP60; Sony NP-FP70; Sony NP-FP71; Sony NP-FP90; Sony NP-FP91
SONY	<b>NP-FA70</b>	Sony DCR-PC55, DCR-PC55/S, DCR-PC55/B, DCR-PC55/R, DCR-PC55/W, DCR-PC53E, DCR-HC90E, DCR-PC55E, DCR-PC1000E, DCR-HC43E, DCR-HC90, DCR-DVD7, DCR-DVD7E, DCR-PC1000	NP-FA50
SONY	<b>NP-F960</b>	HDR-FX7, HVR-Z1U, DCR-VX2100, HDR-FX1	NP-F750; NP-F770; NP-F950; NP-F960; NP-F970
SONY	<b>NP-FH70</b>	Sony DCR-DVD308 y otros	Sony NP-FH30; Sony NP-FH40; Sony NP-FH50; Sony NP-FH60; Sony NP-FH70; Sony NP-FH90; Sony NP-FH100



MARCA	Modelo	COMPATIBILIDAD CON CAMARAS/VIDEOCAMARAS DIGITALES...	COMPATIBILIDAD CON OTROS MODELOS LITIO...
SONY	<b>NP-BG1 SBG1</b>	SONY DSC W 40; SONY DSC W 50; SONY DSC W 70; SONY DSC W 100; SONY Cybershot DSC-N1, DSC-W30, DSC-W35, DSC-W55, DSC-W70, DSC-W80, DSC-W90, DSC-W100, DSC-W200, DSC-N1, DSC-N2, DSC-H7, DSC-H9, DSC-T20, DSC-T80, DSC-T100, DSC-T25, DSC-T20, DSC-W300, DSC-W170, DSC-W150, DSC-W130, DSC-W125, DSC-W120, DSC-W115, DSC-W110, DSC-W85, H50, H10, H9, H7, H3	
SONY	<b>BD-1</b>	DSC-T70, DSC T200, DSC-T2	Sony NP-FD1
SONY	<b>NP-FH70</b>  <b>SIN CABLE</b>	Sony DCR-DVD106 , Sony DCR-DVD106E , Sony DCR-DVD108 , Sony DCR-DVD108E , Sony DCR-DVD109 , Sony DCR-DVD109E , Sony DCR-DVD110 , Sony DCR-DVD110E , Sony DCR-DVD115 , Sony DCR-DVD115E	Sony NP-FH30; Sony NP-FH40; Sony NP-FH50; Sony NP-FH60; Sony NP-FH70; Sony NP-FH90; Sony NP-FH100
SONY	<b>NP-FM 500</b> <b>sin cable</b>	Sony Alpha DSLR-A100 , , Sony Alpha DSLR-A200 , , Sony Alpha DSLR-A300 , Sony Alpha DSLR-A300X , Sony Alpha DSLR-A300K , , Sony Alpha DSLR-A350 , Sony Alpha DSLR-A350K Sony Alpha DSLR-A700 Sony Alpha DSLR-A700P Sony Alpha DSLR-A700K Sony Alpha DSLR-A900	